

ADJUSTMENT SHEET

KUBI7 K2000



VERTICAL ADJUSTMENT




Untighten the blocking screw **A** in all the hinges on the door leaf



Rotate screw **B**



Tighten the blocking screw **A** in all the hinges (max 4 Nm)

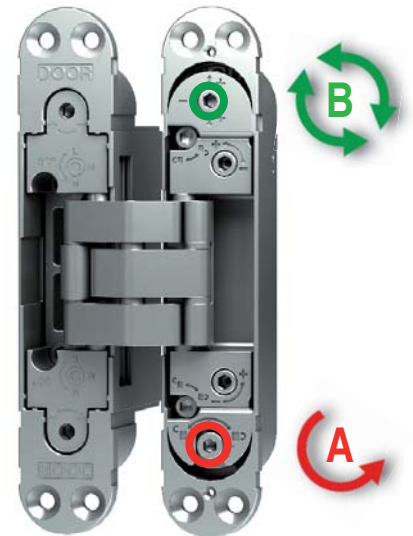


HORIZONTAL ADJUSTMENT



Rotate screws **C**

Note: do the same rotation with both screws

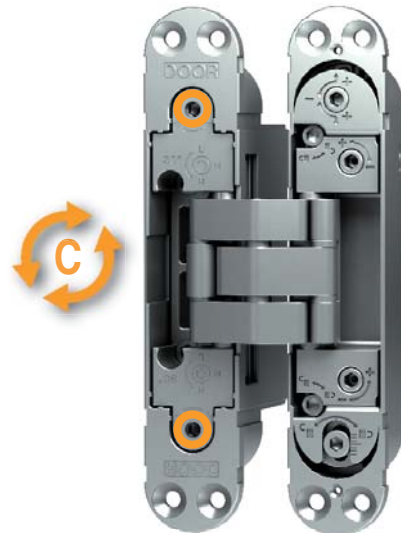

DEPTH ADJUSTMENT



Untighten the blocking screw **D** in all the hinges on the door leaf



Rotate screws **E**



Tighten the blocking screw **D** in all the hinges (max 4 Nm)

